



# SAJDAH COUNTER

## Instruction

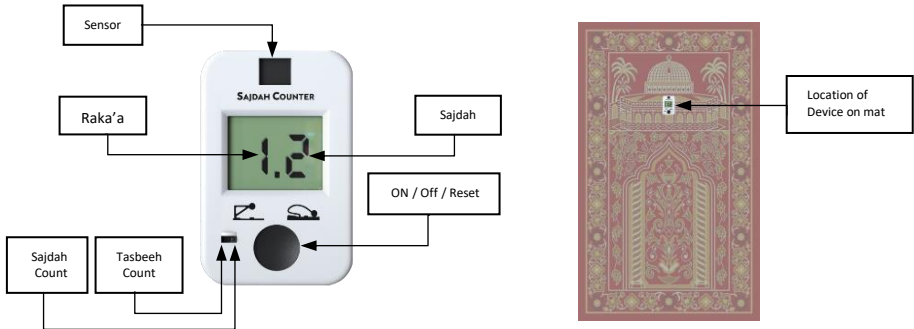

### Product Description and Operation

#### Follow the instructions below for proper operation:

- Place the device on the prayer mat at about 5 cm (2 in) below the location of your face during sojood such that it does not touch the chin, and away from the knees position, as shown in the picture above.
- To turn On the device press on the push button once **after placing the device in its correct position**. Observe the display showing: . **Note: Pressing the push button before placing the device in its correct position may lead to incorrect count.**
- The display is read as follows:  
The number on the right indicates Sajdah count (1,2).  
The number on the left indicates number of Raka'at (1, 2, 3..9)

#### Examples:

First Sajdah/First Raka'a



Second Sajdah/First Raka'a





First Sajdah/Second Raka'a



Second Sajdah /Second Raka'a




- After the 9<sup>th</sup> Raka'a a dot (.) appears on the left side i.e.First Sajdah/ the indicates . For example more'a or aRak "to indicate the 10  Fourteenth Raka'a, and so on.
- The device turns off automatically if the display doesn't change for 30 minutes. However, it can be turned off manually by pressing the push button for 2

### Tasbeeh:



To start Tasbeeh push the slide switch to the left side as shown above, then press on the push button once for each time. The display advances once after each time you press the button.

After the number reaches 99 the display goes back to  with a dot appearing at the left side to indicate that the number is more than 100.

To reset the count to zero press the push button for 2 seconds.

To switch off the device push back the slide switch to the right then press the push button for 3 seconds.

### Important Notes for Proper Operation:



The device works on sensing the amount of light available at the sensor. So when the person is standing up for prayer, the light intensity at the light sensor would be maximum. During Sojood, the light falling at the sensor decreases, hence the unit counts one Sajdah, and so on. Please observe the following:

- In order for the device to count correctly, we assume the minimum time for Sajda is 2 seconds. Hence, if you are praying too fast the device will not count correctly.
- Since the device works on light intensity, it may not count correctly if the room light intensity changes during prayer, e.g. someone turns off/on additional light during prayers, or if the sky becomes cloudy if praying outdoors.
- The unit may not work correctly in extreme ambient light conditions where the light is too bright or too low.

# SAJDAH COUNTER

---

## Battery Replacement

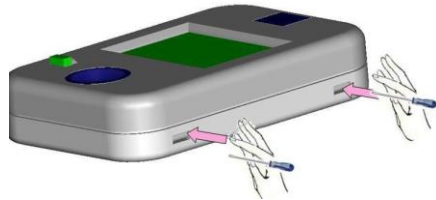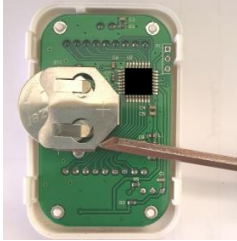

### **Battery Replacement:**

The device uses button type battery model **CR2032** which lasts from 6 – 12 months depending on usage.

To replace the battery you need to open the cover by pushing the tip of a flat screwdriver into the slot as shown in the picture above. You need to push until the cover snaps open.

Once the lower cover is removed, you may use the same screwdriver to push the battery out of the retainer.

Insert the new battery, making sure the positive side is pointing away from the board. Push the battery all the way into the retainer.

Close the bottom cover by just pressing it against the top cover until it snaps closed.